



SPARE PARTS ABUMATIC 145

259	Side plate screw	6716	Rubber cushion plate
3909	Locking washer	6718	Winding cup shaft
5423	Handle nut	6719	Winding cup shaft spring
5579	Ratchet	6720	Locking washer
5653	Side plate	6742	Securing plate
5655	Release trigger bushing	6743	Hub
5671	Release trigger	6746	Winding cup
5674	Release trigger plate	6753	Spool with line 0,30, 0,35 or 0,40
5680	Guiding sled	6758	Spool socket
5736	Main gear	6764	Pick-up release shaft
5744	Eccentric screw	6845	Housing
5751	Ratchet wheel	6846	Oilite bushing
5752	Base drag washer	6849	Pinion gear
5753	Driving plate	6850	Thrust washer
6710	Line pick-up ejector	6851	Spring washer
6711	Line pick-up	6852	Shaft for main gear
6712	Line pick-up spring	6855	Drag pressure spring
6713	Spring for line pick-up ejector	6858	Dust shield
6714	Bell cover	6860	Handle
6715	Rubber cushion	6864	Drag adjusting knob

Please specify reel model number when ordering parts.