



SPARE PARTS ABUMATIC 290

259	Side plate screw	6805	Hub
3909	Locking washer	6806	Pinion gear
3940	Spool	6807	Winding cup
3956	Spool socket (5676)	6808	Bell cover
5552	Oilite bushing	6809	Rubber cushion plate
5579	Ratchet	6811	Lock for pick up release shaft
5652	Securing plate	6812	Pick up release shaft
5653	Side plate	6813	Drag adjusting knob
5655	Release trigger bushing	9004	Shaft for main gear
5671	Release trigger	9005	Base drag washer
5672	Spool (same as 3940)	9008	Friction washer
5674	Release trigger plate	9009	Driving plate
5680	Guiding sled	9010	Ratchet wheel
6710	Line pick-up ejector	9011	Bearing race
6711	Line pick-up	9013	Housing
6712	Line pick-up spring	9014	Distance tube
6713	Spring for line pick-up ejector	9015	Axial ball bearing
6715	Rubber cushion	9017	Handle
6718	Winding cup shaft	9020	Protecting ring
6719	Winding cup shaft spring	9022	Spring
6720	Locking washer	9091	Spring washer
6763	Locking washer	9915	Main gear

Please specify reel model number when ordering parts.